



**50512****ACTIVE BIKE 2****50514****ACTIVE BIKE 3****AGURI****WWW.AGURI.EU****LIT Pritvirtinimo instrukcijos****PL Instrukcja montażu****CZ Návod na montáž****SK Návod na montáž****SLO Navodila za pritrjevanje****HR Uputa za sastavljanje****HU A felszerelés módja****GR Οδηγίες συναρμολόγησης****UA Інструкція з монтажу****BY Інструкцыя па мантажы****RO Instrucțiuni de montare****TK Uydurma talimat****N Monteringsveiledning****I Istruzioni per il montaggio****GB Fitting instructions****F Instructions de montage****D Montageanleitung****E Instrucciones de montaje****NL Montage-instructies****DK Montering instruktion****FIN Asennusohje****S Monteringsanvisning****RU Инструкция по установке****PT Instruções de Montagem****EST Paigaldusjuhend****LAT Stiprināšanas instrukcija**

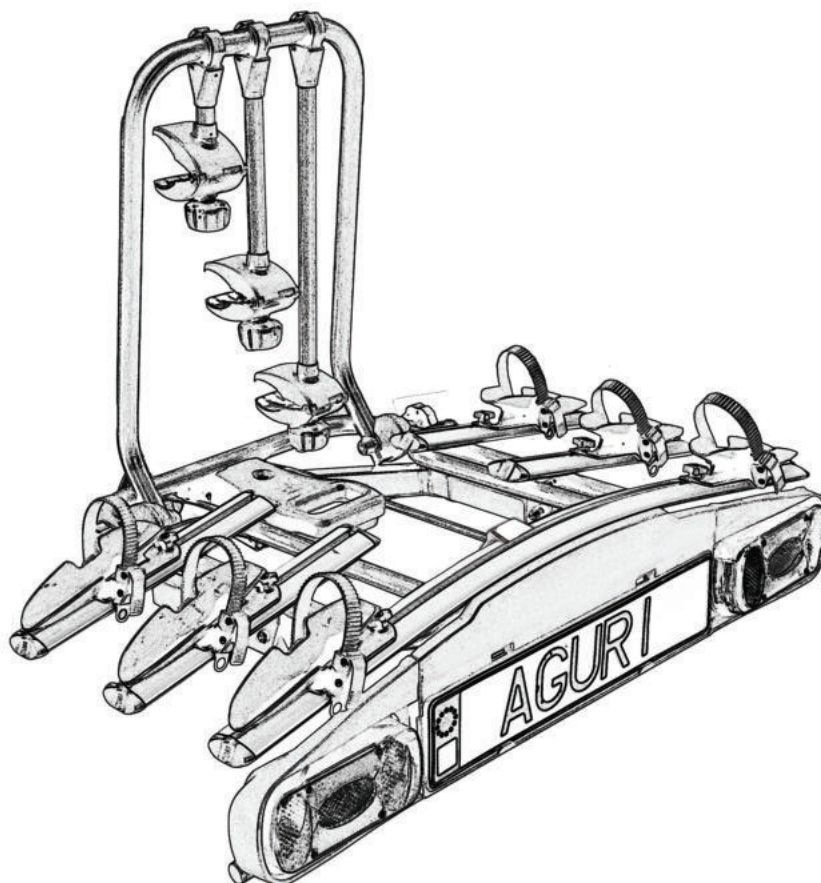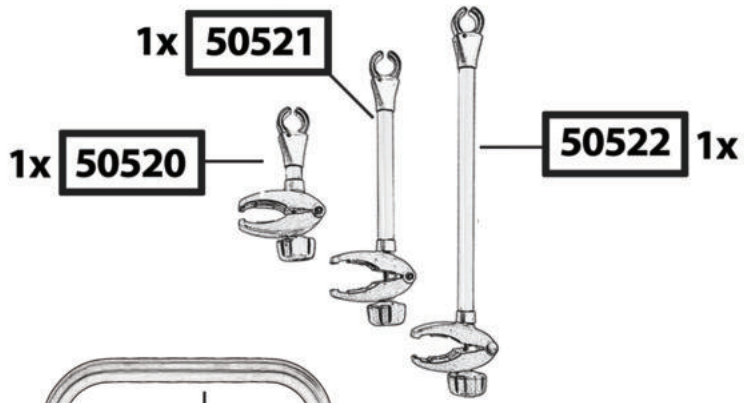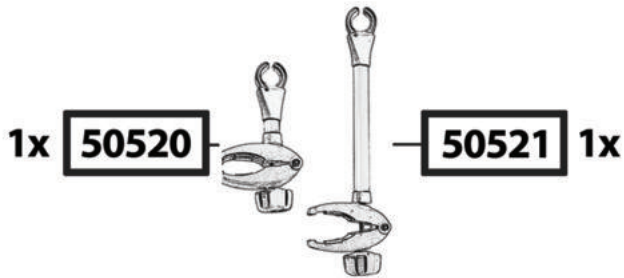













4x **50523**

50514 ACTIVE BIKE 3

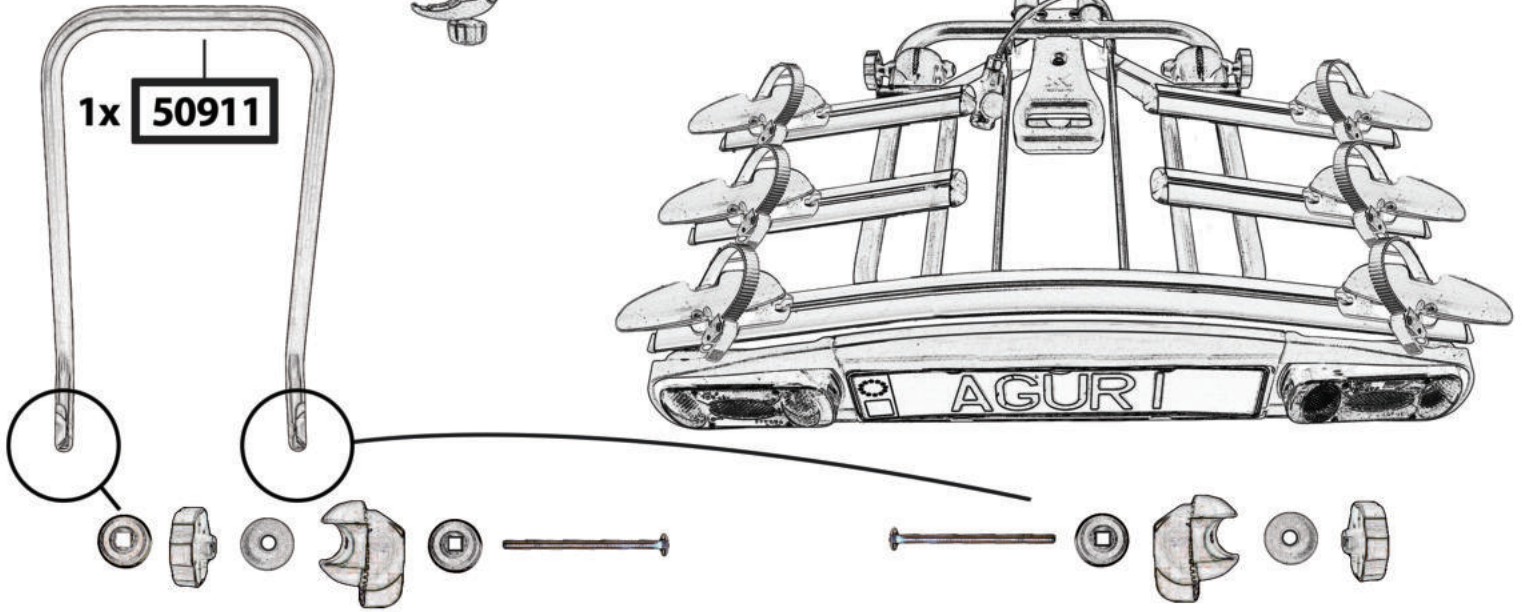


50512 ACTIVE BIKE 2

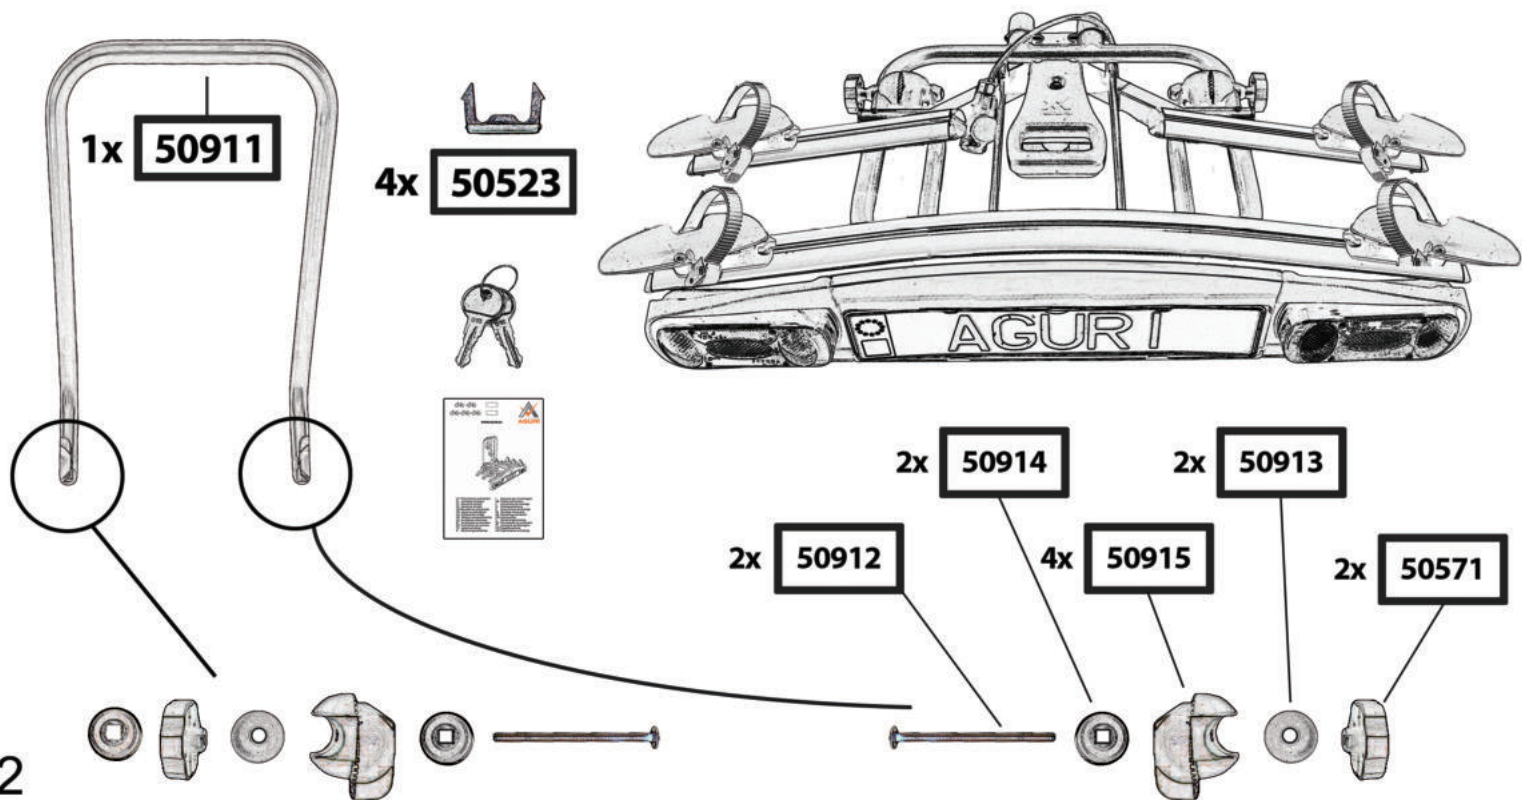

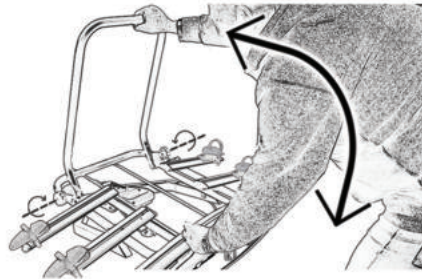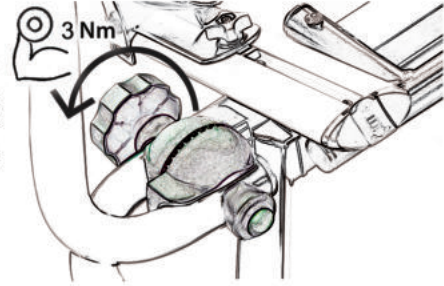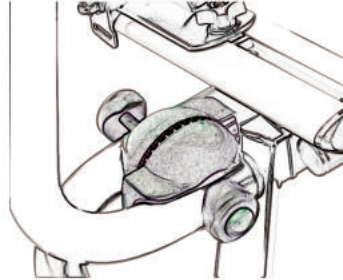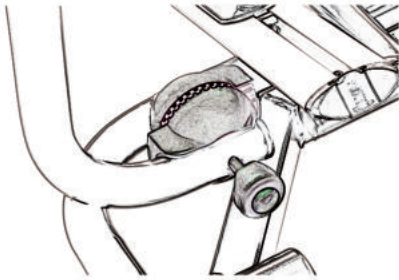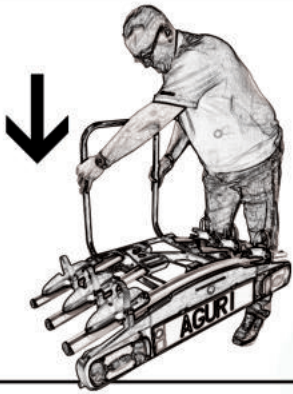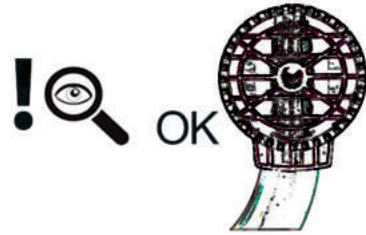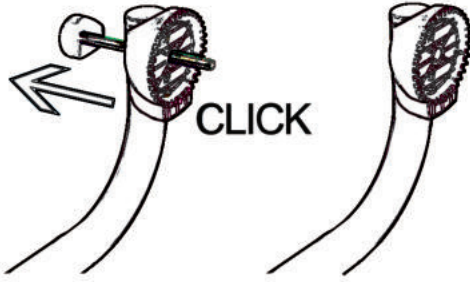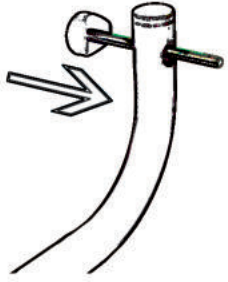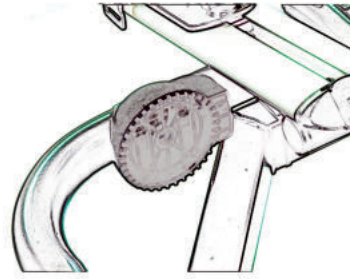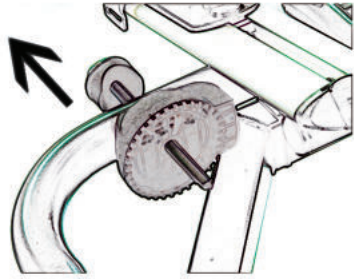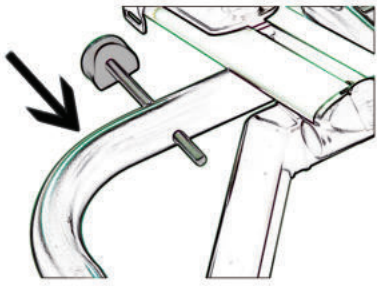


	50512		50514	
 KG				
 ↓	19,5 KG		21 KG	
50 KG	-19,5 KG	30,5 KG	-21 KG	29,5 KG
60 KG	-19,5 KG	40,5 KG	-21 KG	39,5 KG
70 KG	-19,5 KG	50,5 KG	-21 KG	49,5 KG
80 KG	-19,5 KG	60,5 KG	-21 KG	59,5 KG


1.

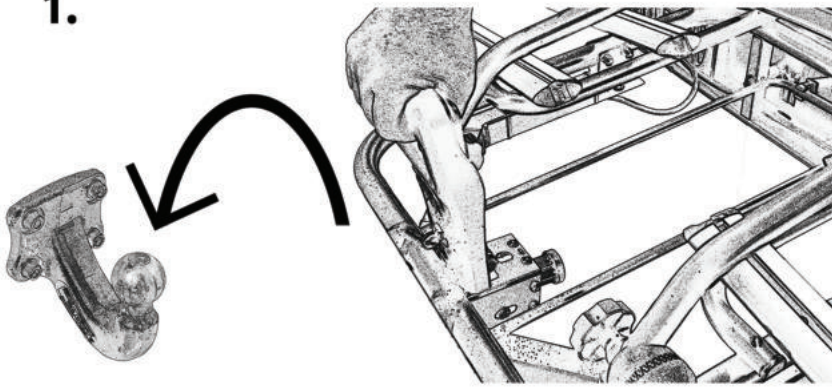


2.

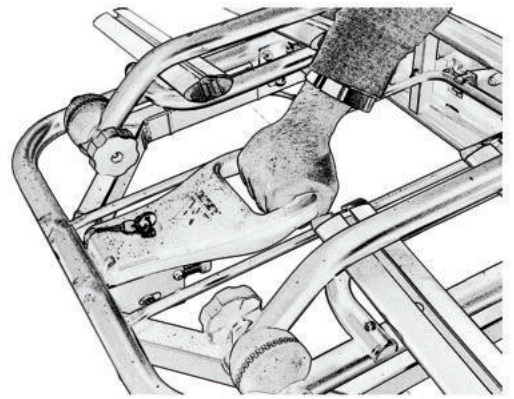


3.

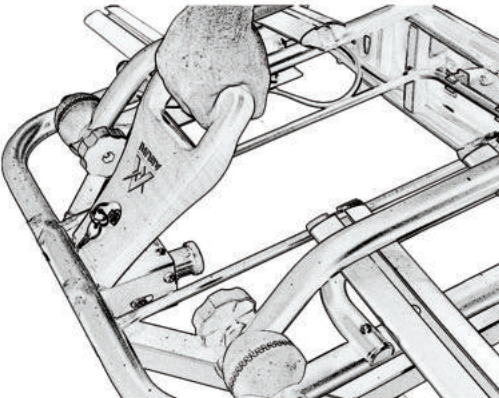


4.

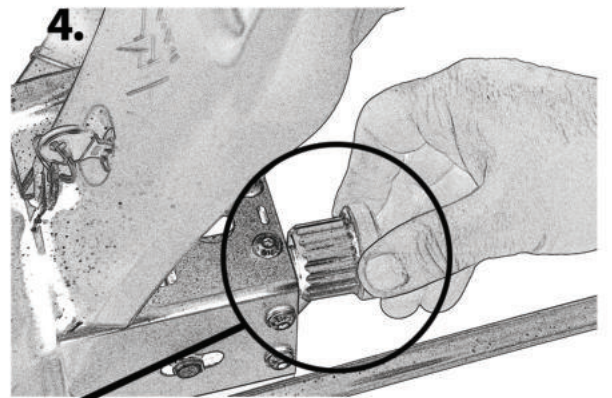


5.

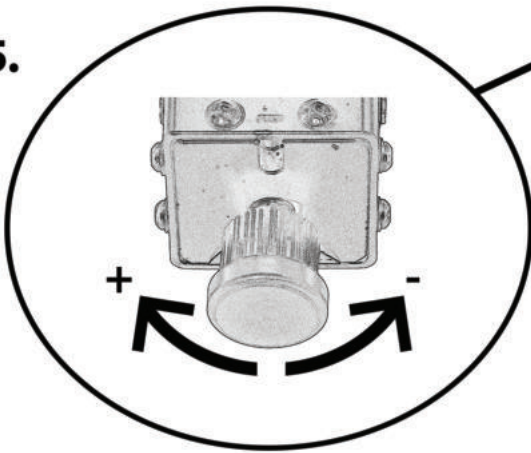


6.

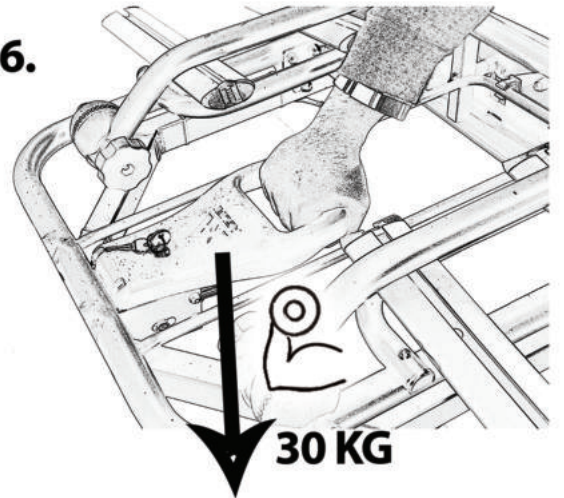


7.





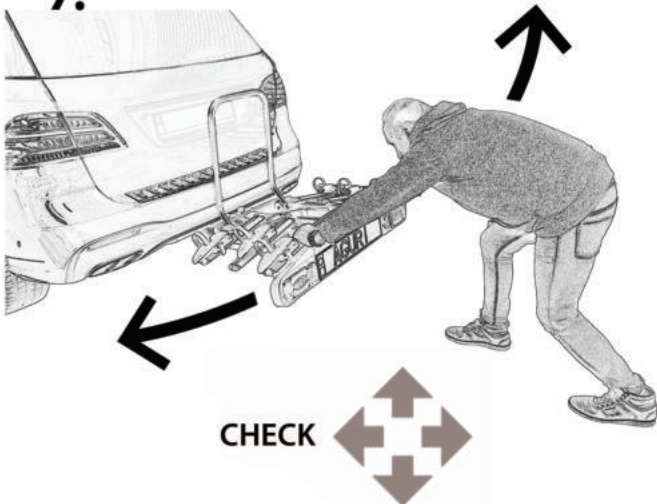





8.

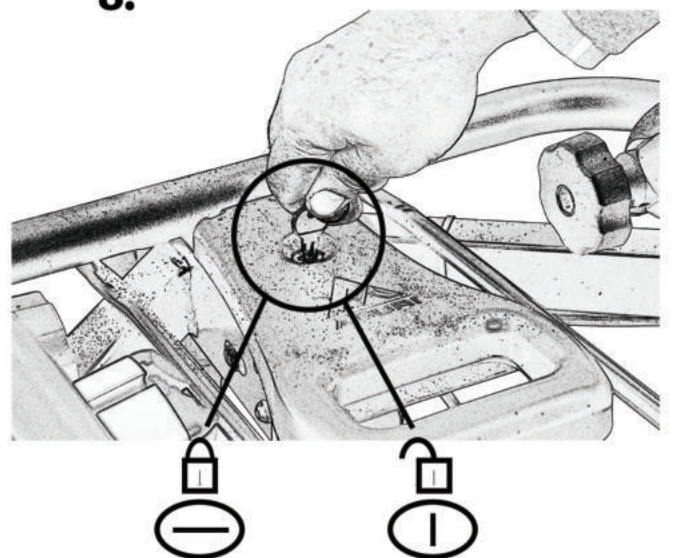





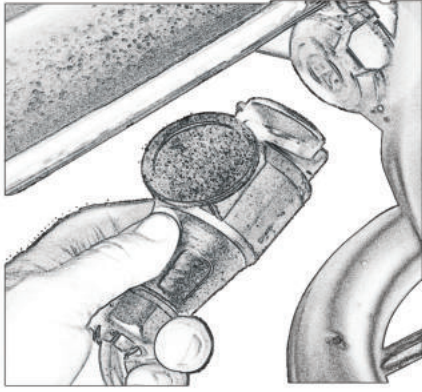








13 PIN

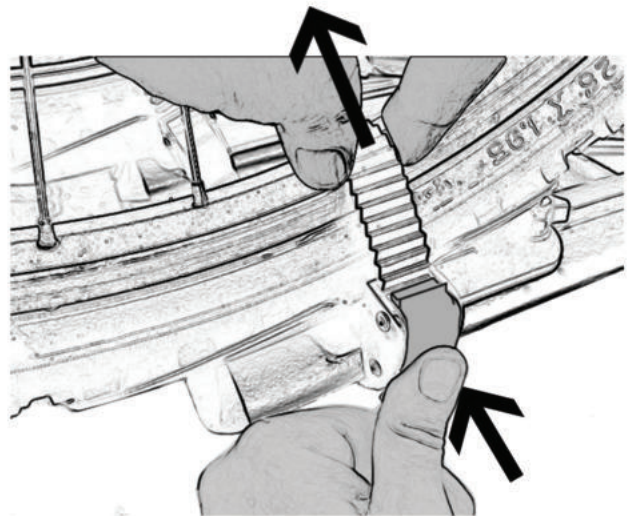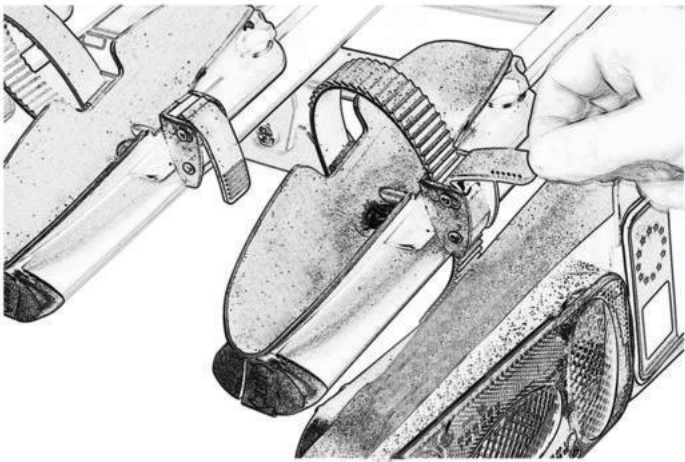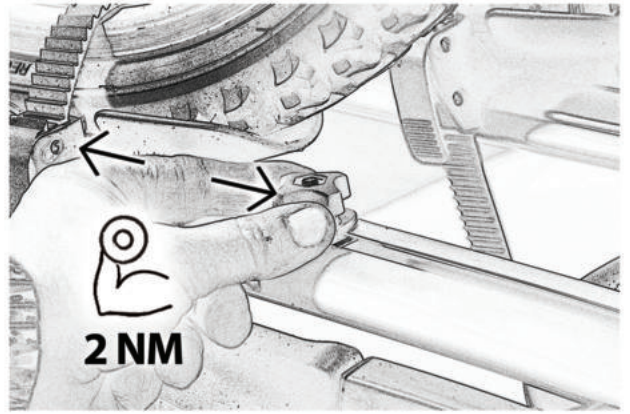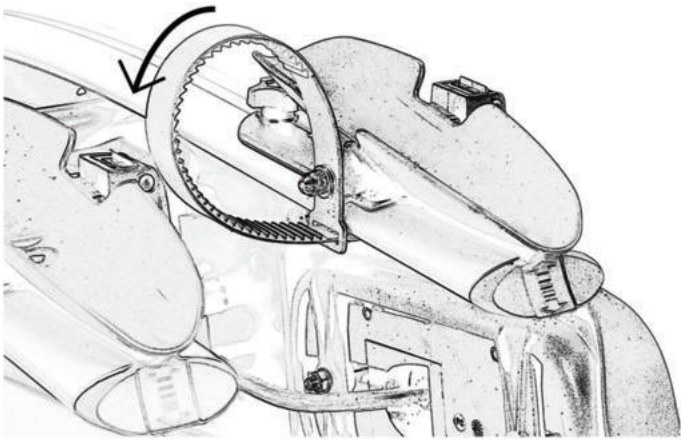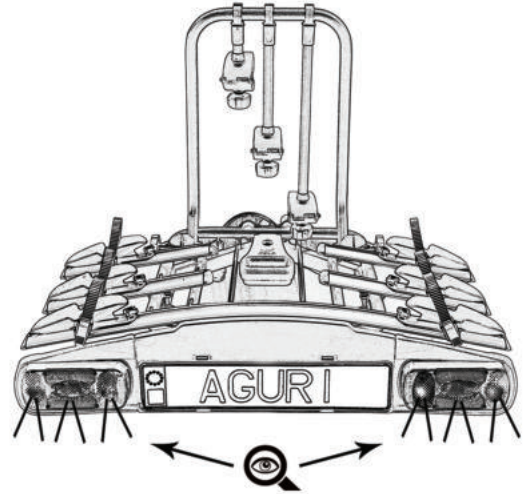


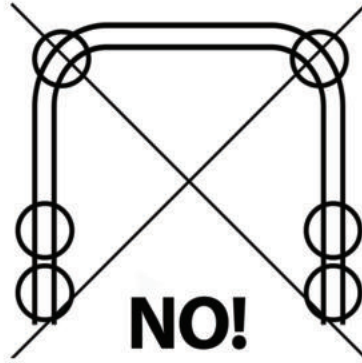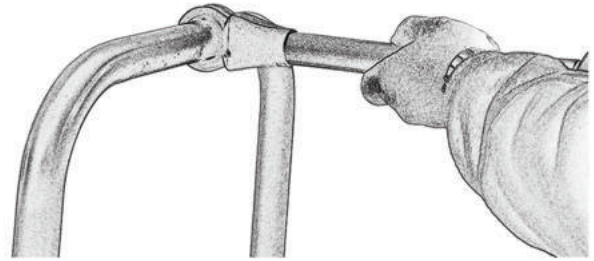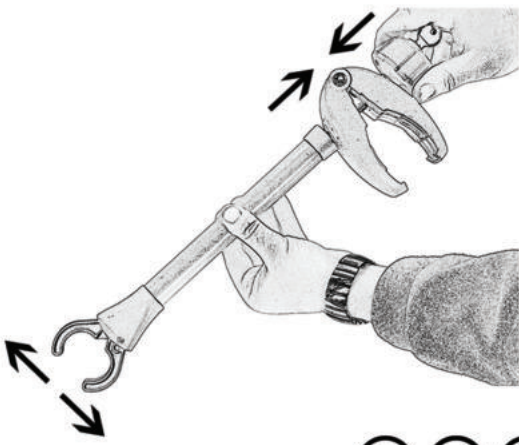


OK

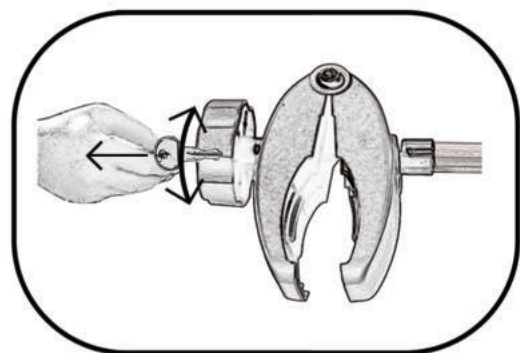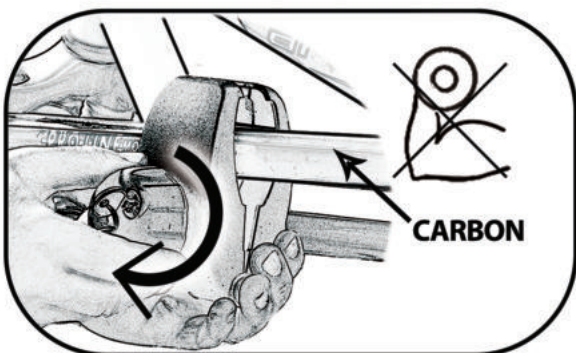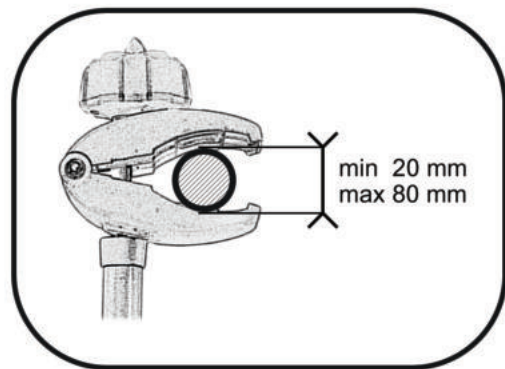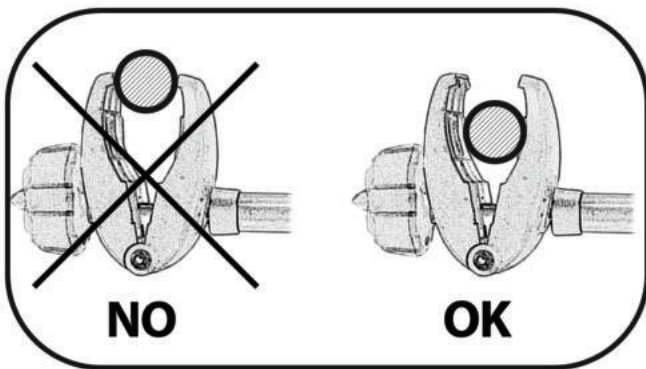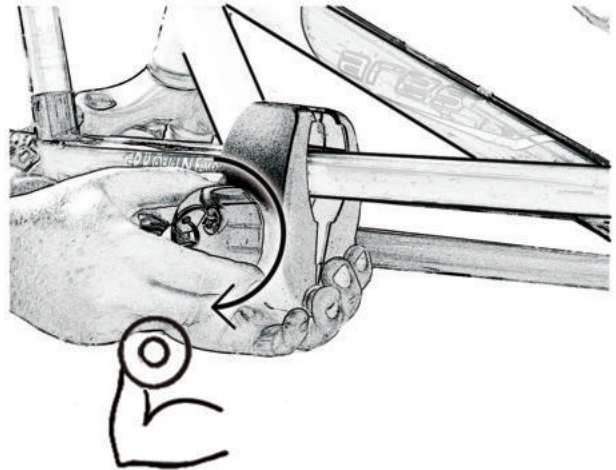

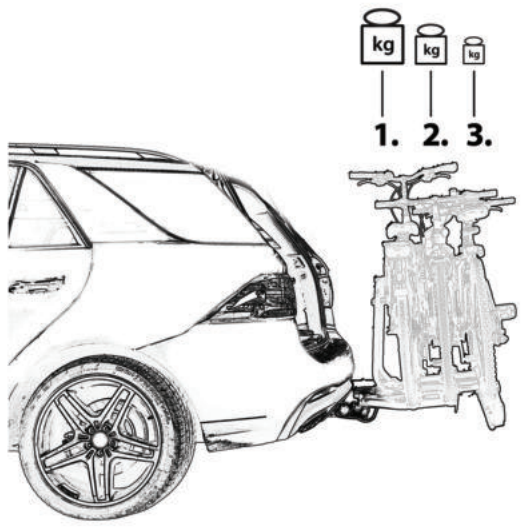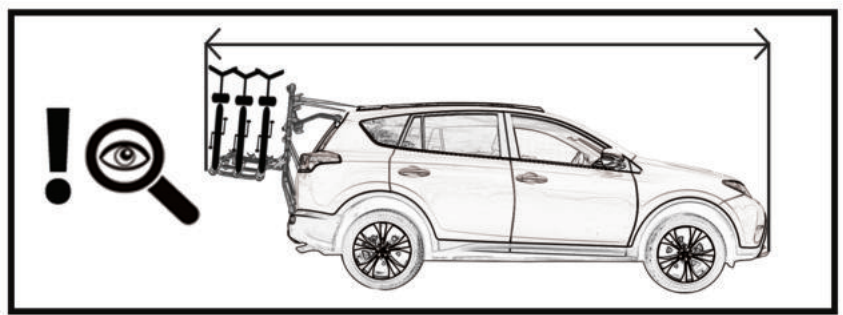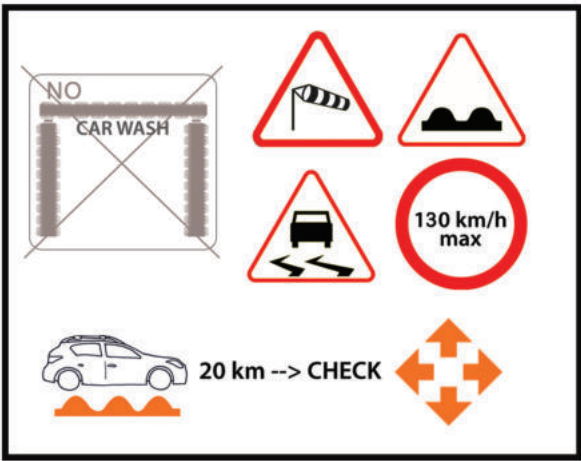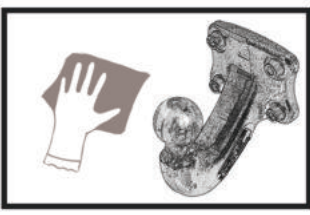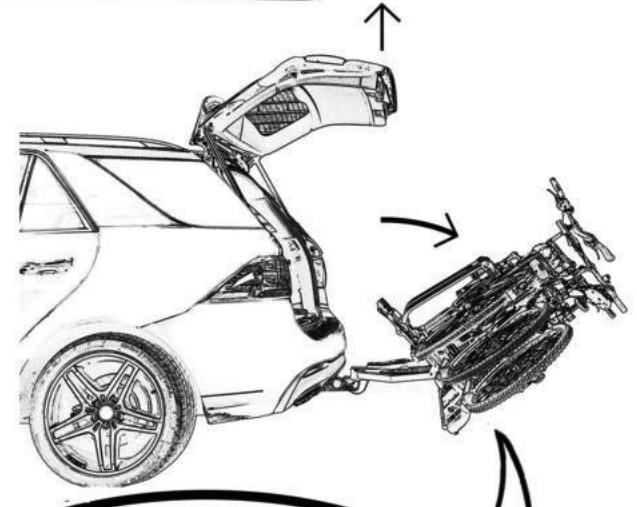
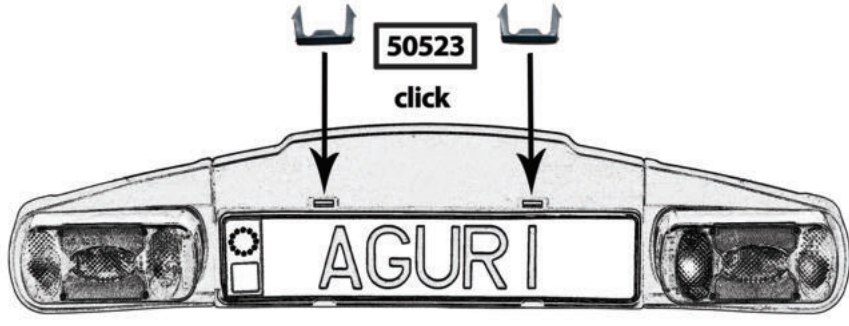


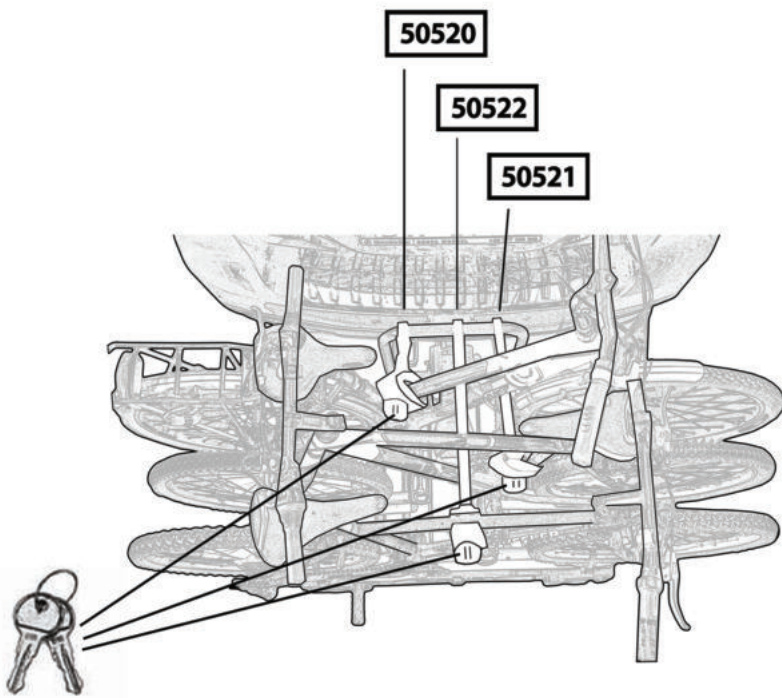

- 1.
- 2.
- 3.

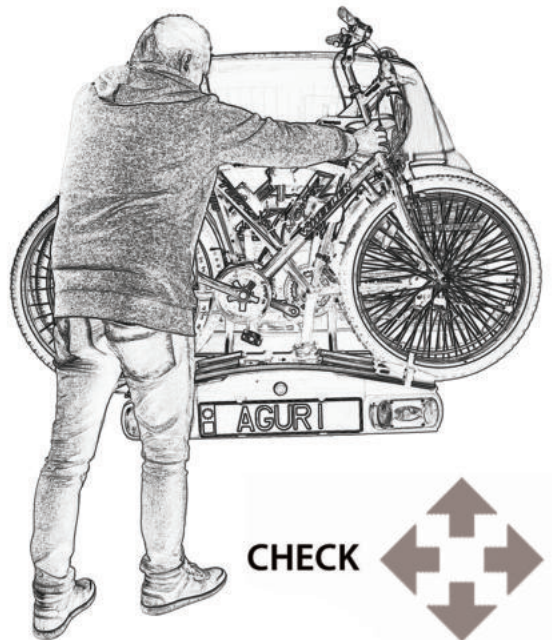


ACCESSORIES

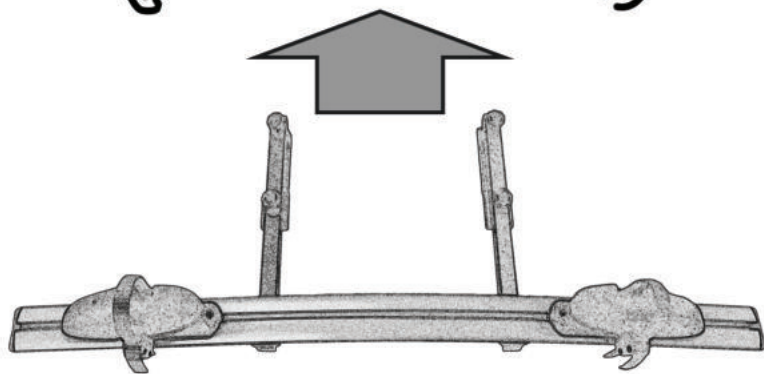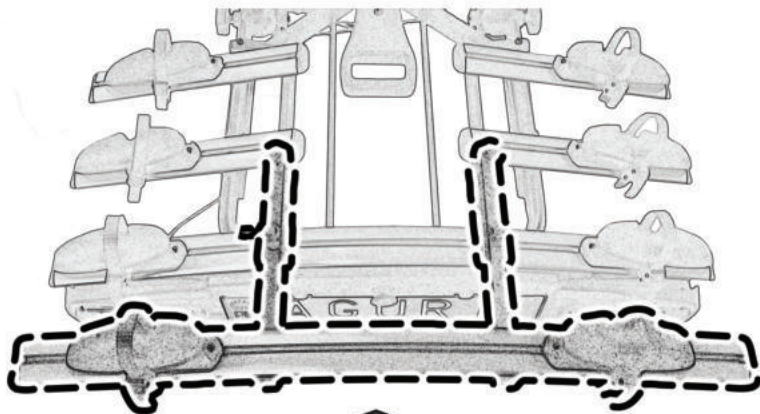


ADAPTER 50518




50532

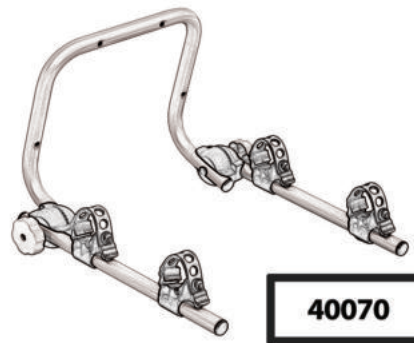

40070

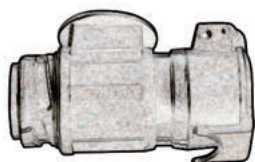

13 PIN / 7 PIN 50072

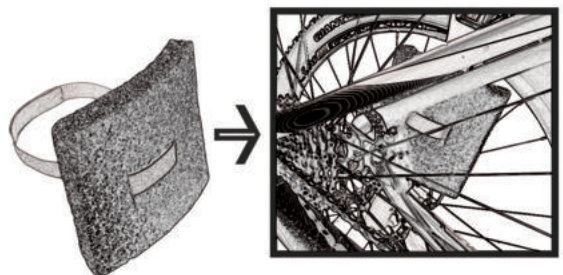

50538 30 x 30 cm