




Light duty, ball - pins


Part Number

N3114910401

Tipping weight

8-15 ton

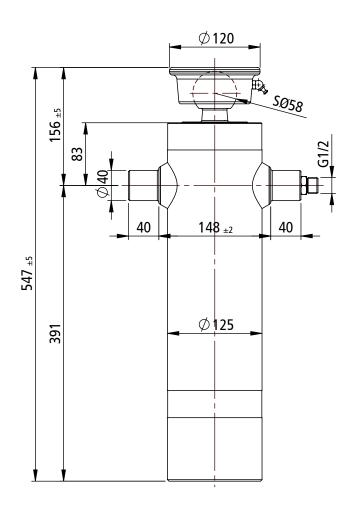

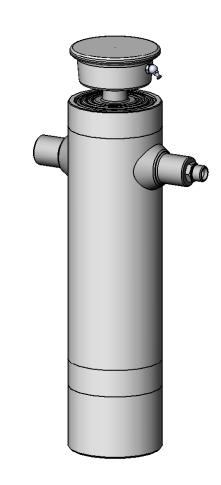

mounting dimension			156 mm + 20 mm min pull out							al stroke	,	1493 mm	max pressure	200 bar
model: IUL 105 1500 4					code: N3114910401				weight: 35			5 kg	3104451054001	
extension	1	2	3	4	-	-	-	-	-			number of	stages: 4	
diameter [mm]	105	90	75	60										
stroke [mm]	374	374	377	368								total: 1493 mm		
thrust [kN]	173	127	88	57								max thrust admitted: 77 kN		
oil [dm³]	3.2	2.4	1.7	1								total: 8.3 dr	n³	

TECHNICAL NOTES AND SPECIFICATIONS

- The normal application of telescopic cylinder is to lift up tipping bodies, loaded with different materials, and consequently discharge this material whilst the cylinder is extended
- The body weight plus the max payload are the max tipping weight that can be raised by the cylinder. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. The real tipping mass can only be calculated by the design engineer of the dump truck, and must take into account the geometry of the dump body and operating conditions. Never exceed the maximum thrust.
- Never exceed maximum pressure.
- Never exceed maximum pressure.

 The cylinder has been designed for loads along the longitudinal axis: the cylinder is a lifting device only and may not be used as structural member or be subject to side load. The ordinary use of telescopic cylinder does not require any coating as the telescopic stages are exposed to atmospheric agents only during the tip-up operation. Therefore telescopic cylinders will be supplied without any coating in absence of any specific requirements.

 IPH warranty does not apply to any kind of corrosion of coated or non-coated parts. See terms of warranty.

 Maximum extension speed less than 0.2 m/s.

 Hydraulic oil temperature admitted between 40°C and +10°C.

- Hydraulic oil temperature admitted between -40°C and +100°C.
- In case the cylinders must be stored, do not remove the package. Store them in a dry place, not exposed to rain. Do not store the cylinders for more than 6 (six) months. Further specifications see mounting instructions, hydraulic oil specification sheet, user & maintenance manual.

REMARKS	[2004.06.21] [2004.06.21]	REVISIONS	
Double lower guide on stage Ø1	05 (Doppia guida inferiore su elemento Ø105)		
		Modulo " Figurino IPH" - 2009.05.18	